



Handset Overview

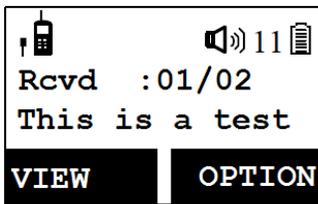

How do I view an alert from the call system?


The alert from the system will come through the phone as a page.

1. Select **VIEW** to see the alert
2. Use the scroll keys if needed to view the entire message
3. Press the **END** key to return to the main screen
4. If there is more than one alert, use the scroll keys to access each alert

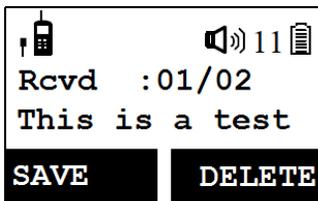

How do I delete an alert?

1. After viewing the alert, hit **END** to get back to the main screen
2. Select **OPTION** then **DELETE**
3. Select **ALL** to delete all pages or **ONE** to delete just this page
4. Select **YES** to confirm

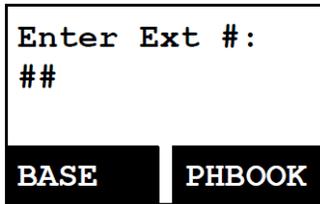

How do I talk to another phone?

Using 2-WAY INTERCOM allows you to talk to other caregivers within your network.

1. Press the **2-WAY INTERCOM** key
2. Enter the two-digit handset ID (NOTE: If you enter a group ID, only the first handset that answers will establish a link with the caller)
3. Press the **END** key to end the call



How do I broadcast to other phones?

Using BROADCAST allows you to use the walkie-talkie feature to talk to all phones, to just a group of phones, or to an individual phone.

Broadcasting to all Phones

1. Press and hold the **BROADCAST** key
2. Start talking once you hear the tone
3. Release the **BROADCAST** key when done talking



Broadcasting to Groups

1. Enter the **Group ID**
2. Press and hold the **BROADCAST** key
3. Start talking once you hear the tone
4. Release the **BROADCAST** key when done talking



Broadcasting to an Individual Phone


1. Enter the **Phone ID**
2. Press and hold the **BROADCAST** key
3. Start talking once you hear the tone
4. Release the **BROADCAST** key when done talking



How do I change my phone settings?

Backlight

1. From the main screen, select **MENU**
2. Enter the **SETTINGS** option number (5)
3. Enter the **BACKLIGHT** option number (7)
4. Make your selection then select **SAVE**

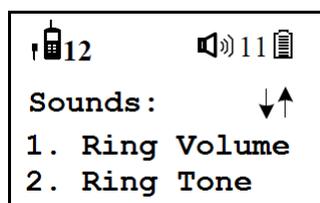

Volume, On/Off Vibrate

1. From the main screen, select **MENU**
2. Enter the **SOUND** option number (4)
3. Enter the **RING VOLUME** option number (1)
4. Make your selection then select **SAVE**